

IMPORTANT

INFORMATION

- All generators have been tested at the factory and is all in working condition.
- Read all instructions PRINTED on the generator set prior to operation.!!
- Read instruction manual prior to operation.
- Generator must be installed 100 percent level!!
- Generator must be installed by a qualified electrician.
- Electrician must provide a COC
- Do not fit extra exhaust system – renders warranty null.
- Do not fit generator close to a wall.
- Ensure the air flow of the generator is clear of all obstacles or walls.
- Generator must run in a free of dust environment.
- Do not start generator under load!
- When connecting the generator on an auto change over system
 - Electrician must ensure that the generator is not overloaded when starting up.
 - Electrician must ensure the generator runs at a 70% average load.

- **The generator has not been built to run at full load all the time, it is designed to handle loads of up to 70 percent at a continuous running load.**
 - On the high speed small generators, it is vital to have a cooling down period every two hours- - these units are not designed to run for a long period of time as the unit will overheat.
 - Ensure fuel tap is closed after use.
 - It is vital that the oil is always on the correct oil level.
 - Change over switch must be connected according to supplier specifications.
 - Generator will not be considered for any warranty if the unit has not been kept in its original state.
-
- **NO WARRANTY ON ELECTRICAL ITEMS – REFER EHD STANDARD TERMS AND CONDITION OF GENERATOR SET ATTACHED.**

Directors: H van As (CEO) H.M. van As (Managing) L.E. van As E. van As

